andrew james

33L Mini Combi Oven

Please read the manual fully before using the appliance and keep the manual safe for future reference.

Contents page

Important safeguard	Page 3
Appliance components diagram	Page 4
Before first time use	Page 5
Using your electric oven	Page 6
Cleaning and maintenance	Page 9
UK & EU Guarantee	Page 10
Electrical information	Page 11
Disposal of the appliance	Page 12
Contact details	Page 13

General safety instructions

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not

place the unit on a hot surface.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions

- Do not place the appliance on or near hot gas/electric burners, heated ovens or in a microwave.
- When operating the oven leave a minimum of 12 cm space on all sides of the oven to allow for adequate air circulation.
- Do not clean the appliance with metal scoring pads as pieces of the scouring pad left on the appliance can present an electrical danger.
- Do not cover the crumb tray or any part of the oven with aluminium foil as this could cause the product to overheat.
- Use caution when removing the tray or disposing of hot grease and other liquids.
- Do not place the appliance near flammable objects such as curtains.
- Do not store the item above ovens.
- Extreme caution should be used when heating materials other than metal or glass.
- Do not place any cardboard, plastic, paper or similar material inside the oven.
- When the oven is not in use do not store any other accessories inside of the oven unless they have been approved by the manufacturer.
- Always wear insulated oven mitts when inserting or removing items from the oven.
- The appliance has a safety door made of tempered glass. The glass is stronger than ordinary glass and more resistant to breaking. Avoid scratching or damaging the glass. If you do so please contact our customer service department.
- The accessible surfaces are liable to get hot when the appliance is operating.
- The glass door cannot support goods in the fully open position.

Appliance components diagram

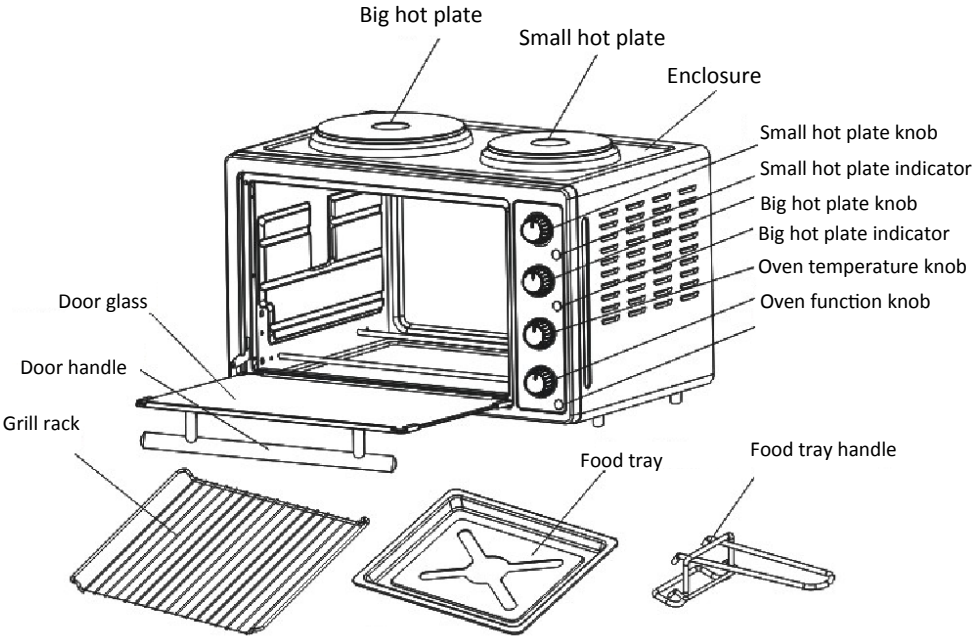

Before first time use

Please read the following instructions before using your electric oven for the first time:

- Make sure the oven is unplugged and the timer knob is set to the “off” position.
- Remove all racks and pans and wash them in hot soapy water before using the oven.
- Ensure that all parts are dry and all parts have been reassembled correctly in the oven before plugging the oven into the outlet.
- It is recommended to run your oven at “max” temperature on function 3 for approximately 15 minutes to eliminate any residue left over from the manufacturing process. The oven may emit a little smoke and odour during this process; this is not a cause for concern and is only temporary.

Using your electric oven

The **function nob** has five settings:

1. Upper heating & low heating with fan
2. Upper heating & fan
3. Upper heating & lower heating
4. Lower heating
5. Upper heating

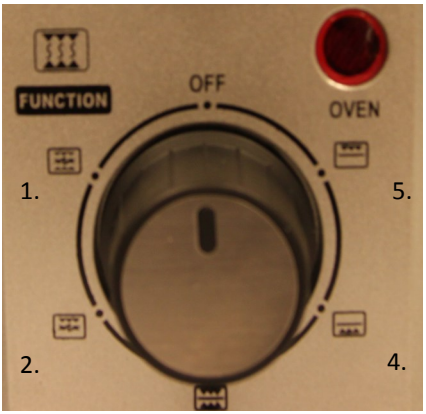

Thermostat knob: Choose your desired temperature.

Indicator cover: Illuminates when the oven has been turned on.

Grill rack: Functions for toasting, baking and general cooking in casserole dishes and standard pans.

Food tray: Used for broiling and roasting meat, poultry, fish and other various foods.

Function 1 & 2

Operation

1. Preheat the oven to your required temperature.
2. This function is ideal for baking.
3. Set the thermostat knob to high.
4. Turn the knob function to 1 or 2.
5. Check your food 5-10 minutes before its expected cooking time.
6. When the food is cooked turn the function knob to “Off”.

Function 3

Operation

1. Place the grill in the middle support rack.
2. Turn the function knob to function 3.
3. Place the food tray on the wire rack.
4. Check the food using a thermometer.
5. To remove food use the tray/rack handle provided to prevent burning yourself.
6. Once the cooking is completed turn the function knob back to “Off”.

Please note that cooking times between meats and frozen food may vary, refer to your recipe for guidance.

Function 4 & 5

Operation

1. This function is ideal for baking cakes etc.
2. Place a grill rack in the middle support guide.
3. Place the food on the wire rack and then place the wire rack onto the food tray.
4. Turn the function knob to either 4 or 5.
5. Check the progress of the food with a thermometer.
6. Remove the food using the tray/rack handles provided to prevent burning yourself.

Hot Plate Function

Operation

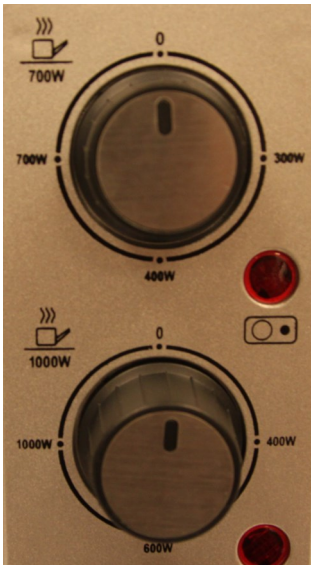

1. Plug the appliances cord into the mains electrical supply.
2. Place the pan on top of either the small or large hot plate.
3. Turn either the small or large hot plate knob on.
4. Select the desired cooking temperature.
5. When completed turn the knob to “0”.

Please note the temperatures of the appliance may vary according to the model

Maintenance instructions:

Cleaning instructions

- Do not for any reason immerse the unit, cord or plug in water or any other liquid.
- To clean the oven wipe the walls of the oven with a mild detergent and dry completely before the next use.
- Do not clean the oven with steel wool scouring pads or abrasive cleaners. Do not scrape the oven walls with metal utensils as this may damage the quick clean interior.
- Wash all the accessories in hot soapy water or in the dishwasher.
- Wipe the door clean with a damp cloth ensuring it is completely dry before using it again.
- Clean the exterior of the appliance with a damp cloth.
- Dry all parts and surfaces thoroughly before plugging the oven into the electrical output.

Storage

- Unplug the unit and allow it to cool before storing the appliance.
- Store the oven in its original box or in a clean, dry place.
- Do not store the appliance while it is plugged in.
- Never wrap the cord tightly around the appliance.
- Try to avoid putting stress on the cord when it enters the unit as it could cause the cord to fray and break.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days.
For our returns policy please go to www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Electrical Information

Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live** (**Brown**) wire connects to the right-most live (L) terminal nearest to the fuse.
- The **Neutral** (**Blue**) wire connects to the left-most neutral (N) terminal.
- The **Earth** (**Green and Yellow**) wire connects to the central, top most earthed (**E**) terminal.

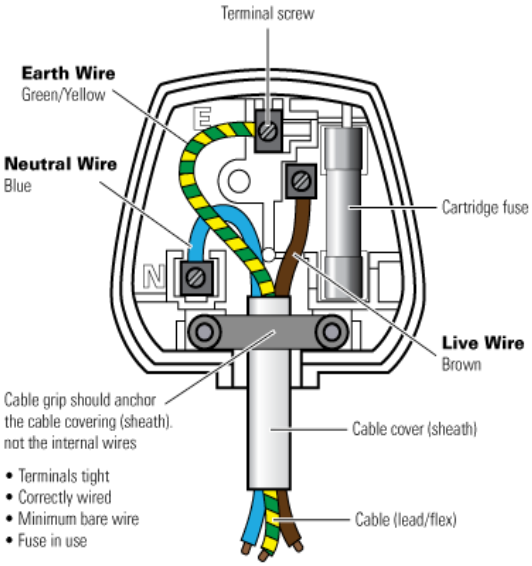

Warning:

If the appliance is double insulated indicated by the double insulated symbol:

it should not have an earth wire or earth connection.

Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the

plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/

Disposal of the appliance

This tool bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled by a selective waste recovery system compliant with European directive 2002/96/EC so that it can be recycled or dismantled in order to reduce any impact on the environment. For further information, please contact your local or regional authorities, Electronic products that are not selectively sorted are potentially harmful to the environment and to human health due to the presence of dangerous substances.